


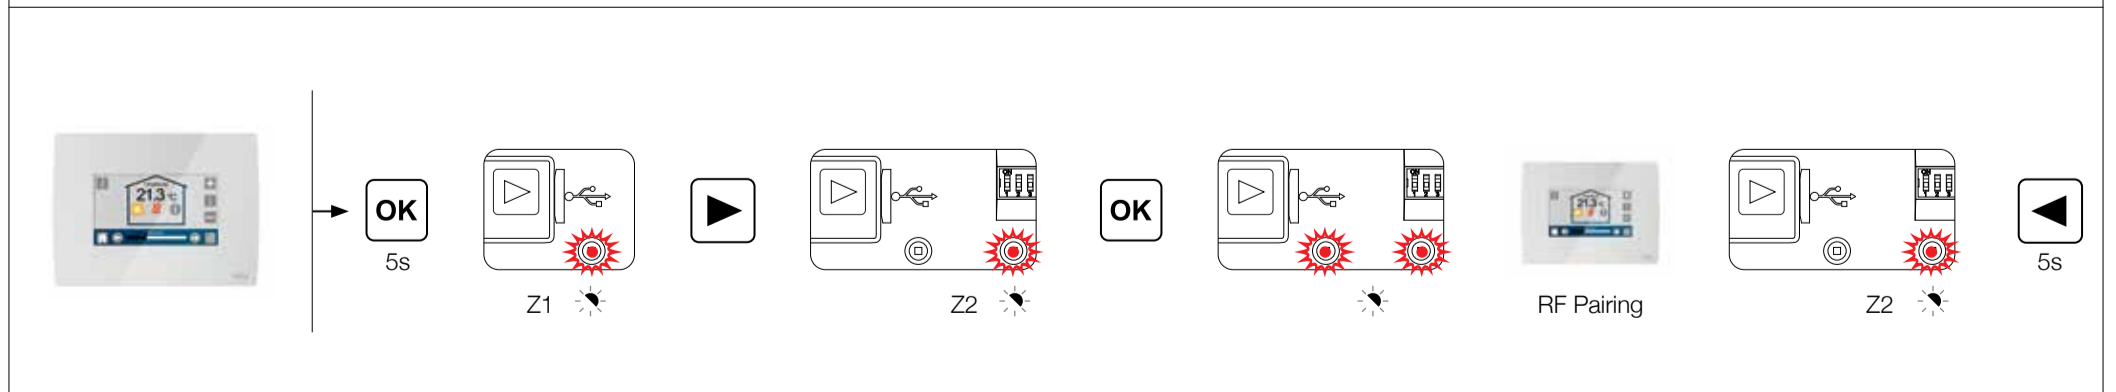
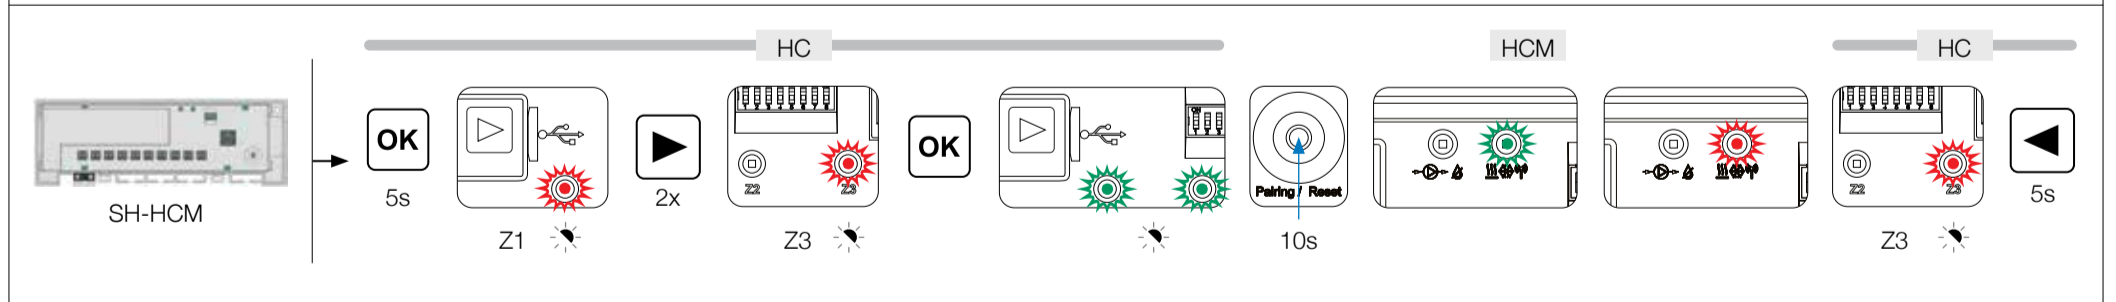
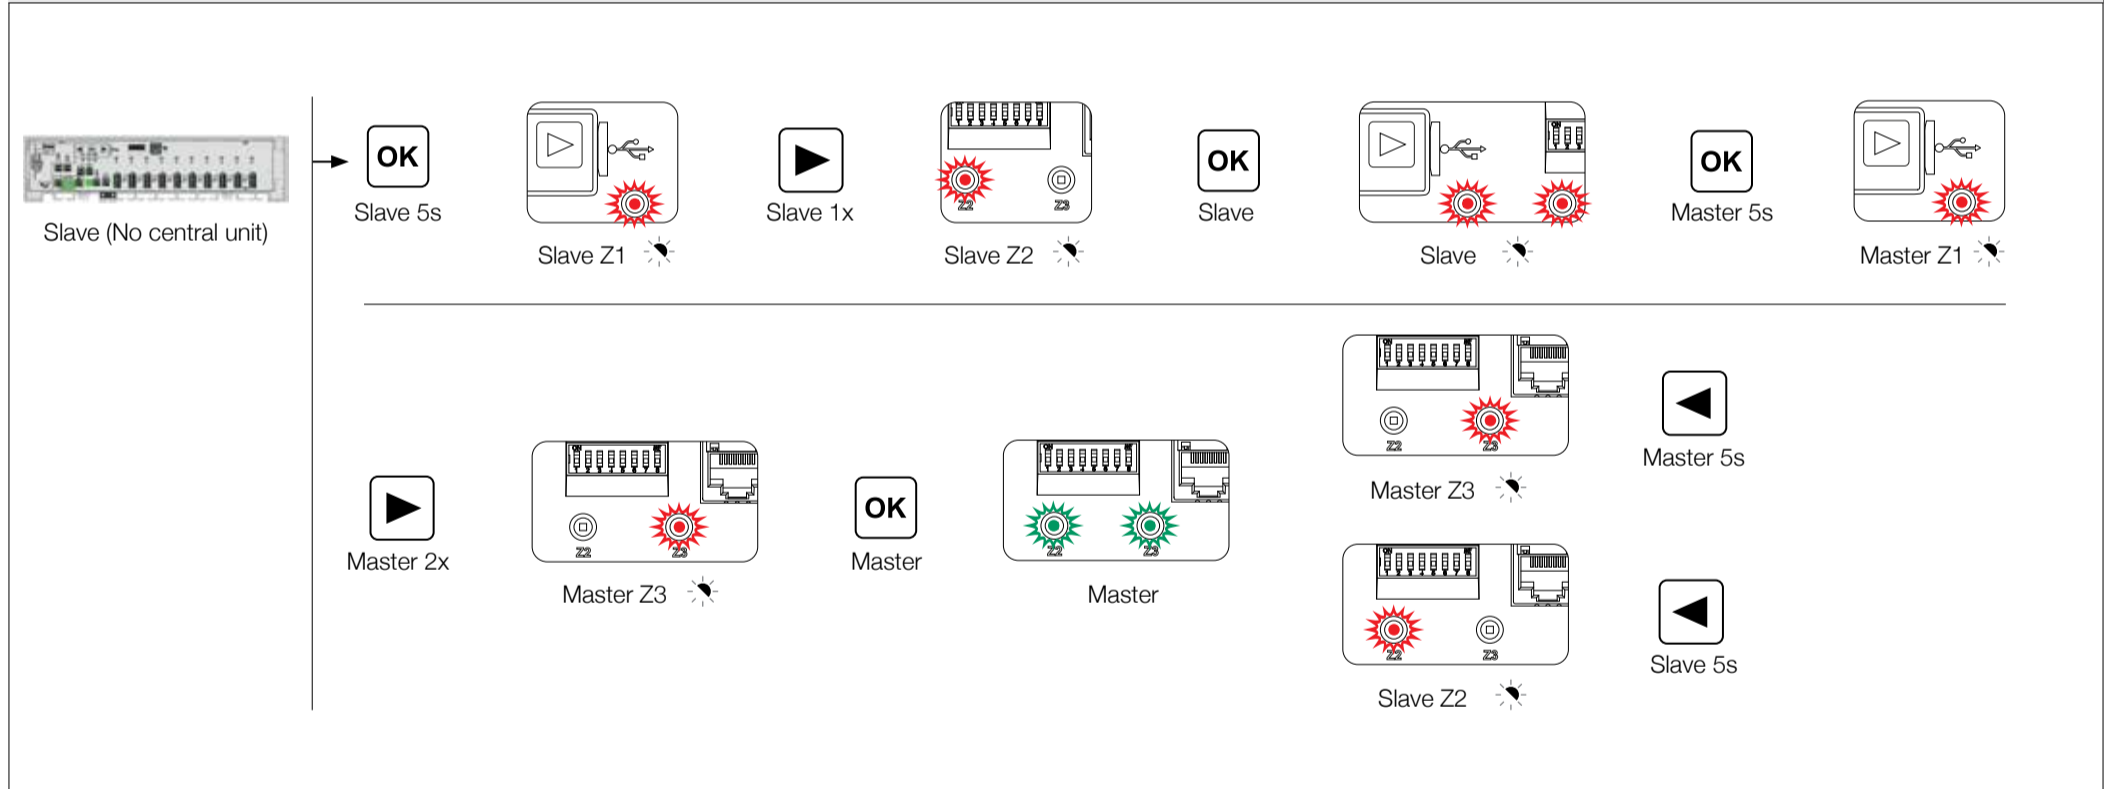
 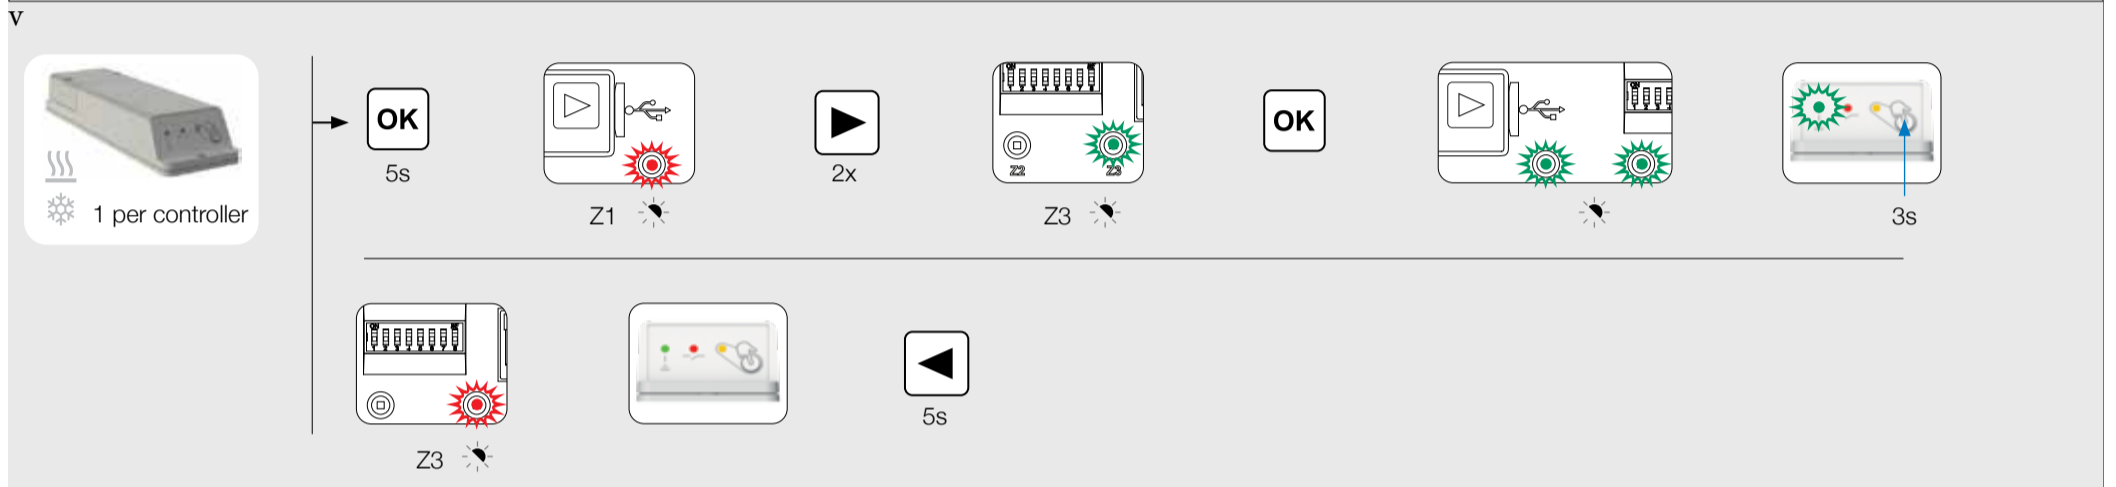


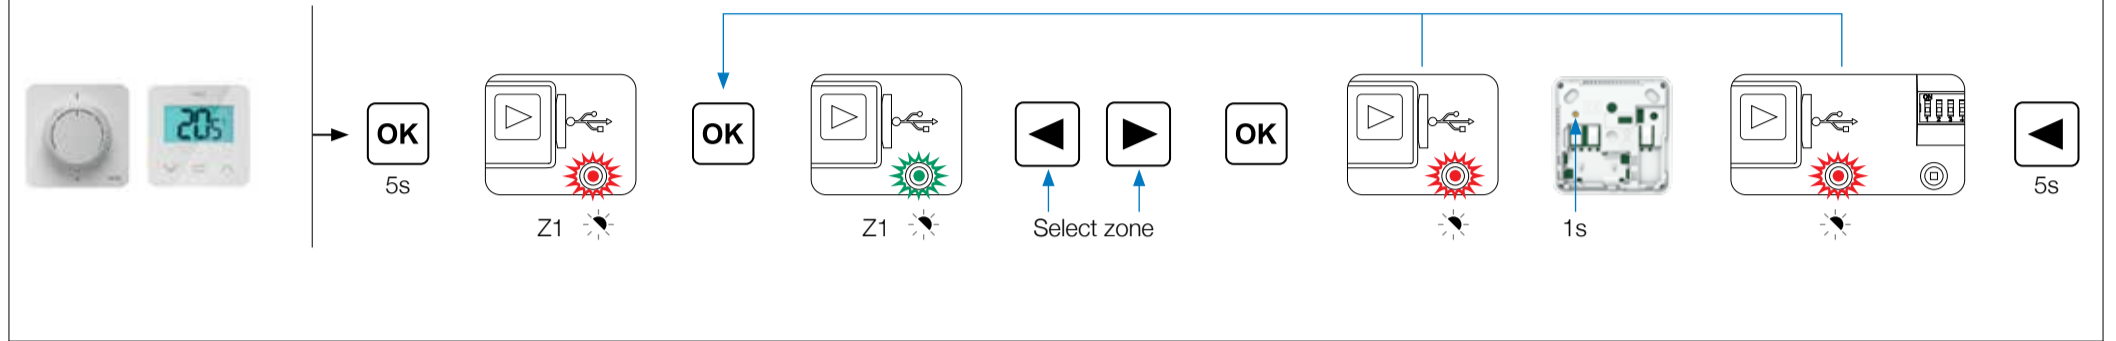

RF Pairing 

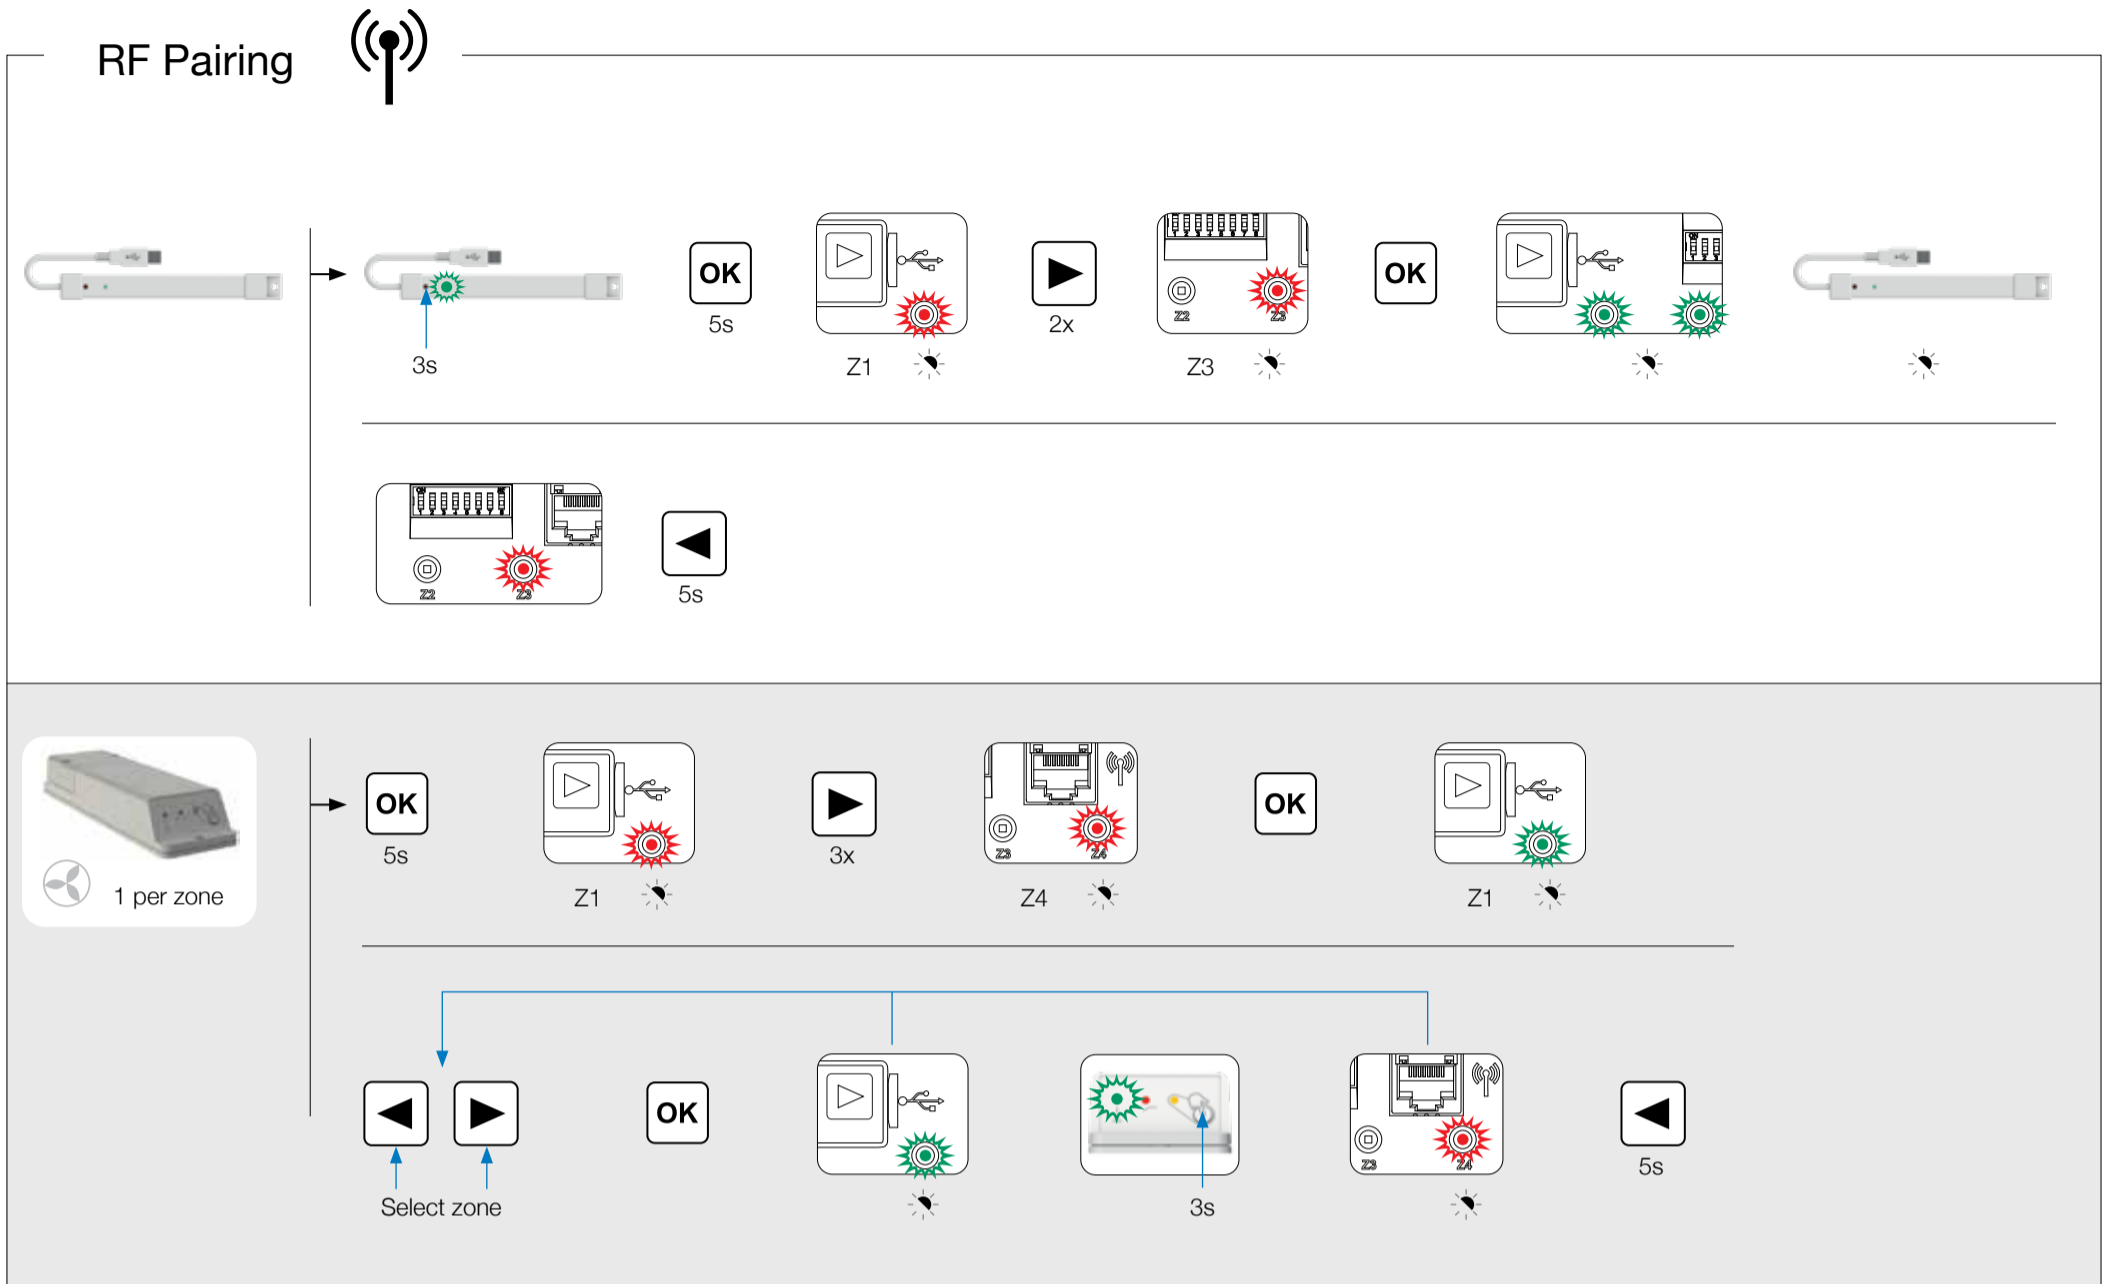

DIP switch number	Function	Value (default: OFF)		Configuration
DIP 1	Pump configuration	OFF		Local (demand on the controller)
		ON		Global (demand from every controller in the system)
DIP 2	Actuator types	OFF		Normally closed
		ON		Normally opened
DIP 3	Pump start delay (for the first actuator) and actuator stop delay for the last actuator	OFF		2min/5min
		ON		5min/20min
DIP 4 and DIP 5	H&C switch control	OFF	OFF	Central
		OFF	ON	Thermostat
		ON	OFF	HCM
		ON	ON	Controller
DIP 6	Anti Grip	OFF		Activated
		ON		Deactivated
DIP 7	Humidity management	OFF		Safety
		ON		Comfort
DIP 8	Humidity sensor	OFF		Humidity sensor
		ON		Water sensor

